


**Porch Post
Installation Instructions**

- cut Post to desired height
- slide TC 6 trim collars over top and bottom of porch post
- fit porch post and pencil top and bottom
- drill $\frac{1}{4}$ " holes for plastic anchors
- fasten 3 clips top and bottom (plastic anchors in bottom only)
- slide post into place and use self-tapping 2" long screws to fasten through angle clips into post
- install remaining 2 clips
- slide trim collars over "L" brackets; fastening with a small amount of PL Premium adhesive and minimal fasteners

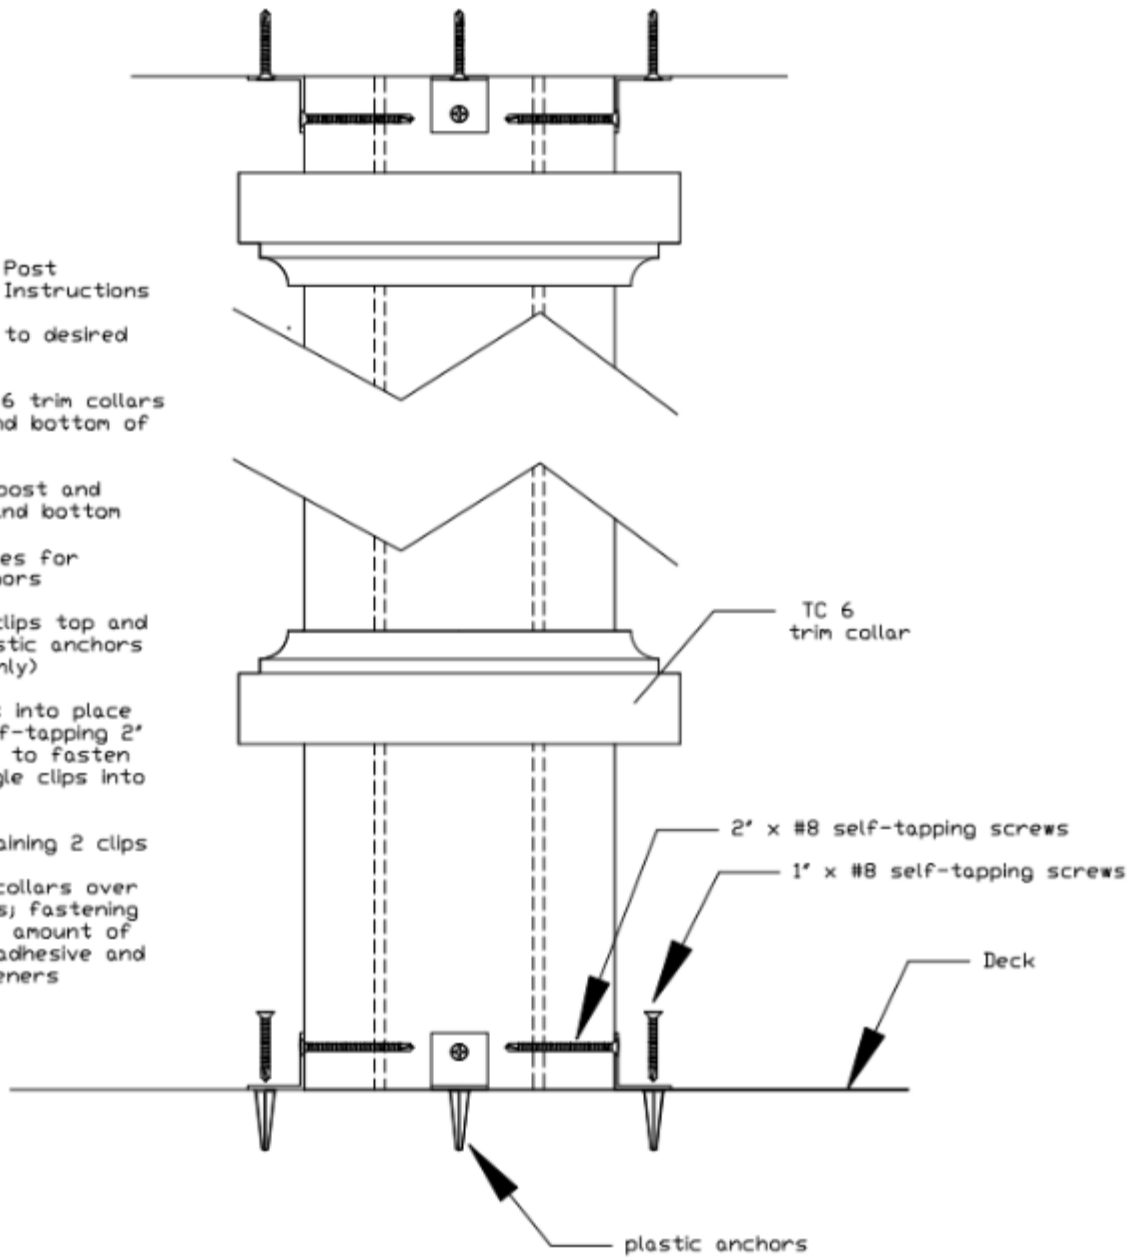

SECTION 01
SCALE: 3/4" = 1'-0"

ELEVATION 02
SCALE: 3/4" = 1'-0"



310 6TH STREET
TOWNSEND, MT 59644
PHONE: (888) 459-9965

GENERAL NOTES:

1. All products are drawn for presentation purpose only therefore image may vary slightly from actual image part.
2. American Porch, LLC reserves the right to change any product design at any time without notification.
3. American Porch, LLC makes no guarantee of suitability on any specific application. Choice of dimensions, quantities, and designs are the sole responsibility of the customer.

PRODUCT NAME:
Porch Post Installation Instructions

PRODUCT #:

PRODUCT DESCRIPTION: